


OUR STOCK RANGE

Number of Treads	Height from Ground to Deck
1	320
2	480
3	640
4	800
5	960
6	1120
7	1280
8	1440
9	1600
10	1760
11	1920
12	2080
13	2240
14	2400
15	2560
16	2720
17	2880

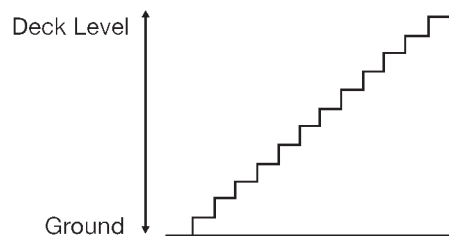

DISTRIBUTOR,



Outdoor Stair Kits Made in Australia

PHONE 0407 041 410

ENQUIRIES sales@oskaustralia.com.au

ASSEMBLY

STEP 1. Lay one stringer flat on an even surface.

STEP 2. Insert each tread into the routed groove, ensuring the reeded grip is at the front of the step.

STEP 3. Place the other stringer on top of the treads and slide into place. (Note) ensure treads are fully positioned into the groove).

STEP 4. Screw one of the stringers to the treads with the screws provided. Then screw the other stringer to the treads on the other side.

DETAILED INSTRUCTIONS INSIDE STRINGER KIT



Outdoor Stair Kits
Keeping Australians employed
Now and in the Future



Meets Rainforest Alliance requirements for Verified Legal Compliance

VERIFICATION REGISTRATION CODE : RA-VLC-006775

www.oskaustralia.com.au
Distributed by OSK Australia

OSK Australia

Outdoor Stair Kits Made in Australia

STAIR KITS



THE BUILDERS CHOICE
In Prefabricated External Stairs

